

TOP



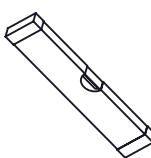
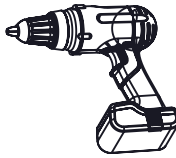
Template for drilling
SWING MOUNT

BOTTOM

**WHEN POSITIONING HOLES,
REMEMBER THE SIZE OF THE TV-SCREEN!**

Read the instructions before assembly!

REQUIRED TOOLS

	6x  Mounting screws, depending on the substrate.	 Spirit level	 Drill driver	8 mm  Drill
--	---	--	---	---

SWING MOUNT

