

# Autolid

## Installation Guide




+48 12 653 53 85/86

dok@sabaj.pl


ul. Domagały 15,  
30-841 Kraków

www.sabaj.pl

1

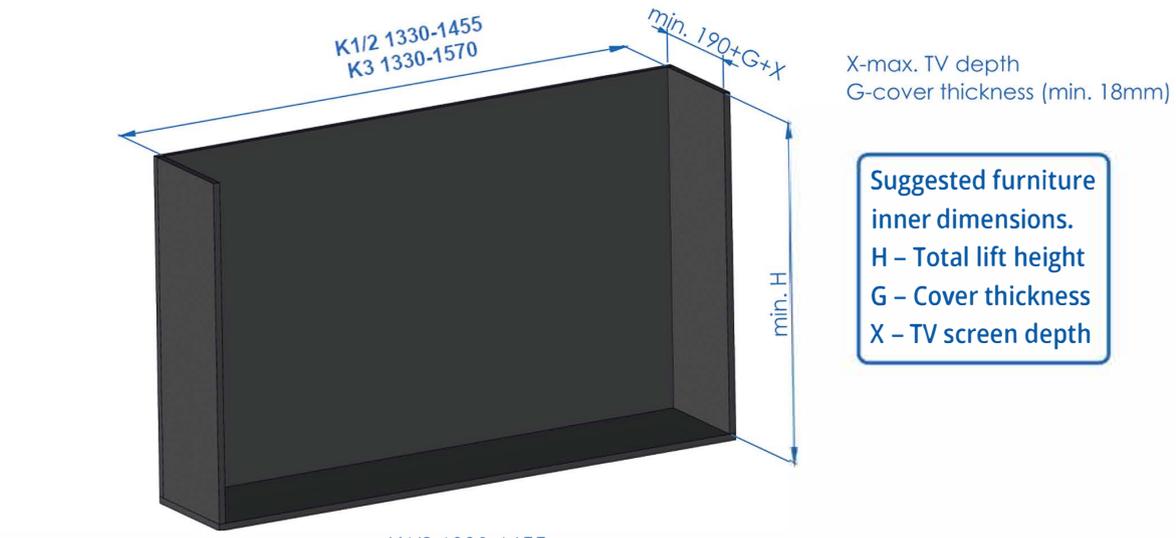


**Suggested furniture inner dimensions.**  
H - Total lift height  
G - Cover thickness  
X - TV screen depth

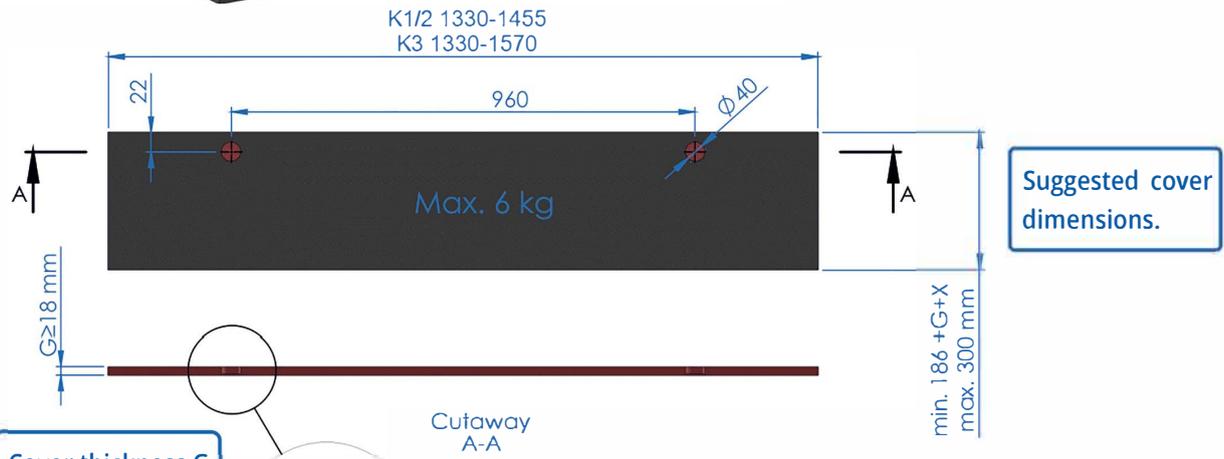


**Suggested cover dimensions.**

**Cover thickness G - Recommended between 18 and 30 mm.**

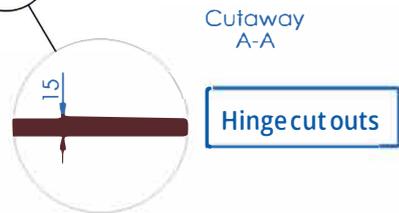

2

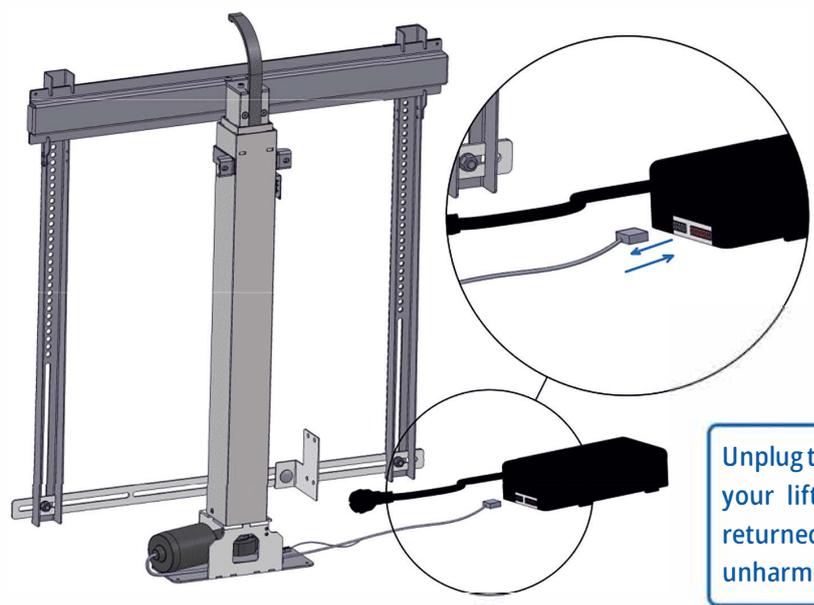


**Unplug the original control box from your lift. The control box can be returned for a refund, if delivered unharmed.**


2

3

Mount your lift to the autolid frame.

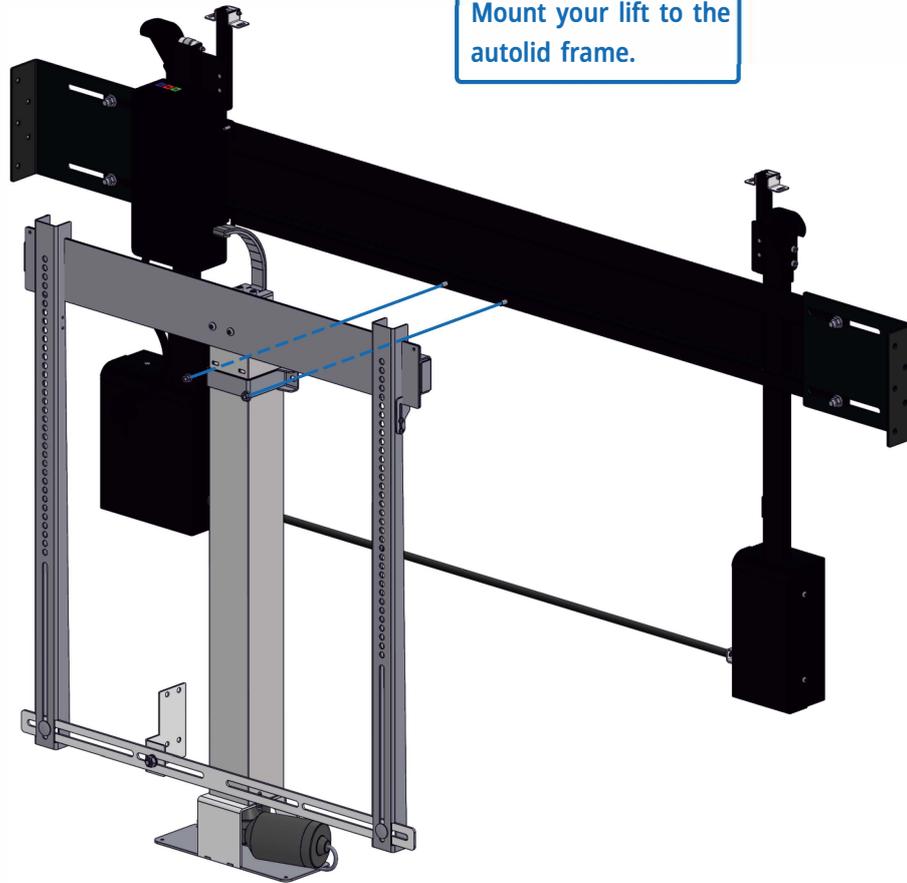



4

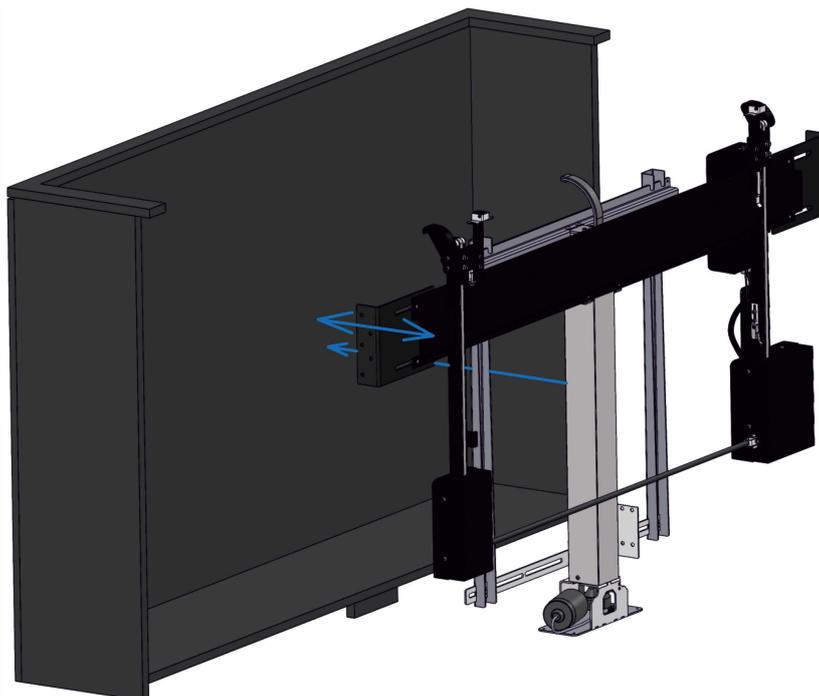

Autolid is delivered with 2 sets of adjustable brackets to be fixed on the sides of the furniture. Use them according to your TV dimensions.  
**Always remember to mount Autolid levelled.**


5

Make sure that there is enough space between back of furniture and Autolid brackets.

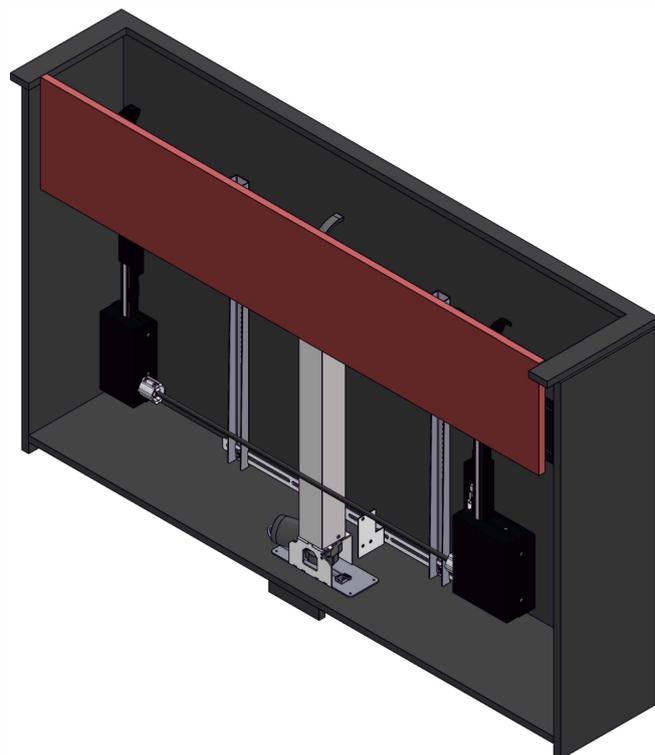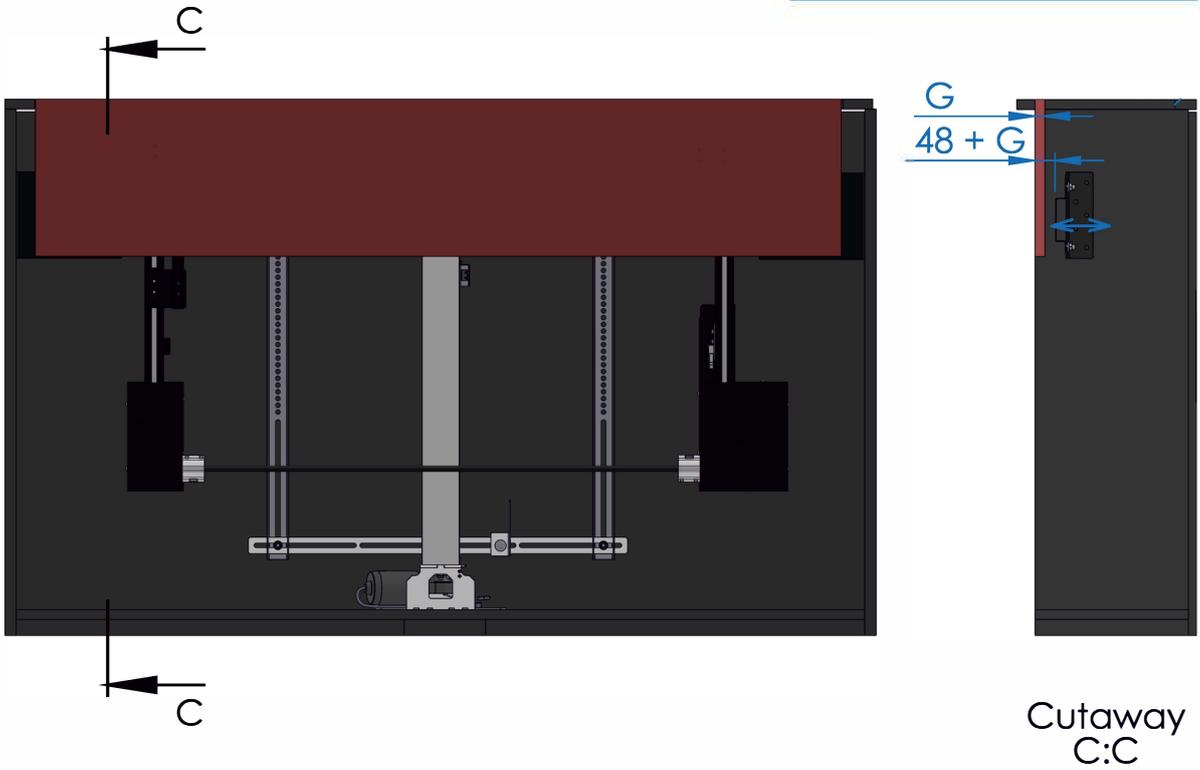


4

6

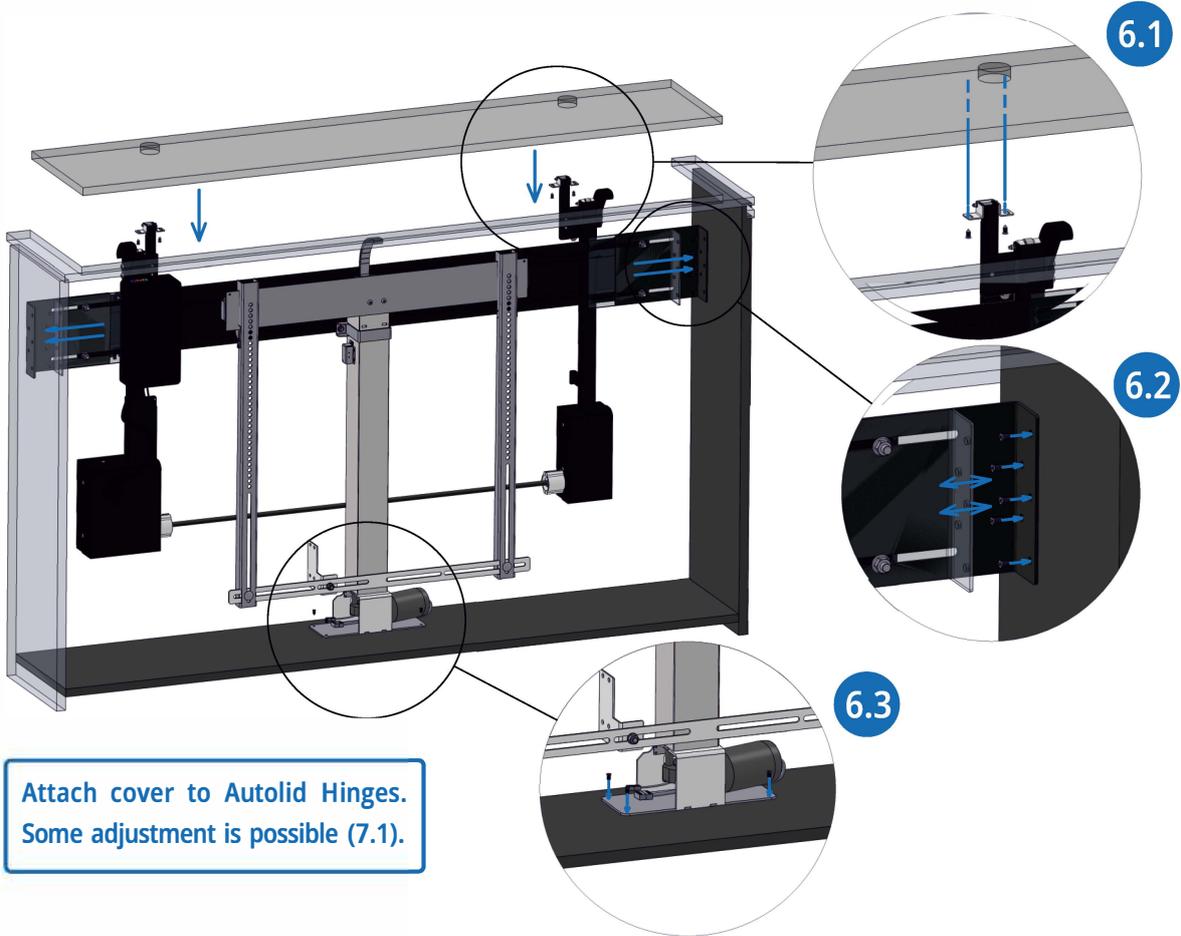

Attach cover to Autolid Hinges. Some adjustment is possible (7.1).

7

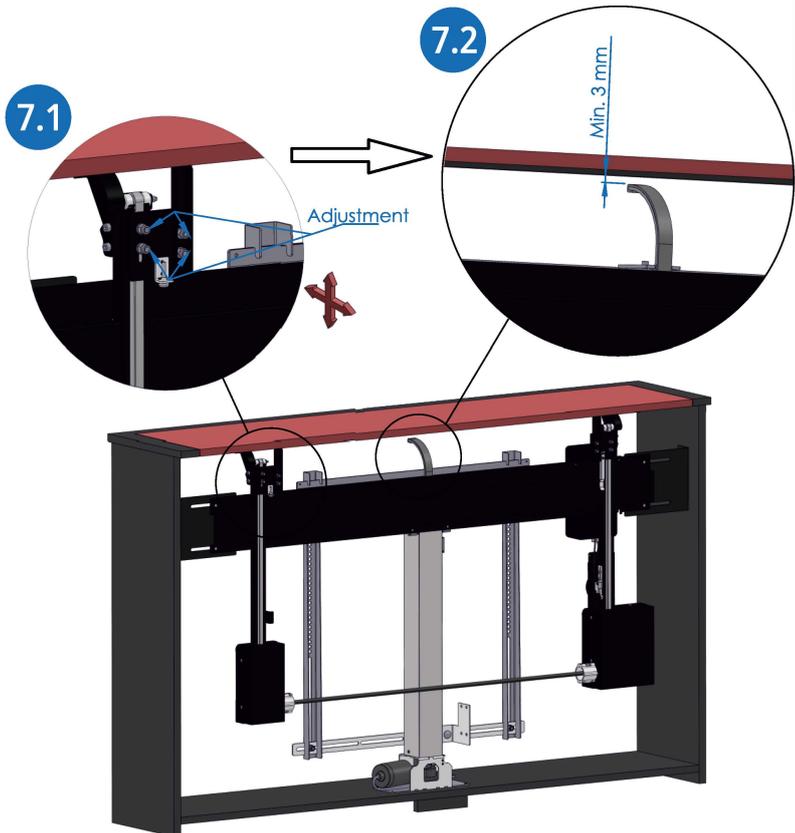

Minimum free space between the lifts top part and cover is 3 mm.

8

When everything is fitted, plug in Autolid with new control box to your lift. Make sure everything runs collision free before using the lift. It is recommended to have a power switch prepared when doing test runs, so that the power can be cut off immediately.

